

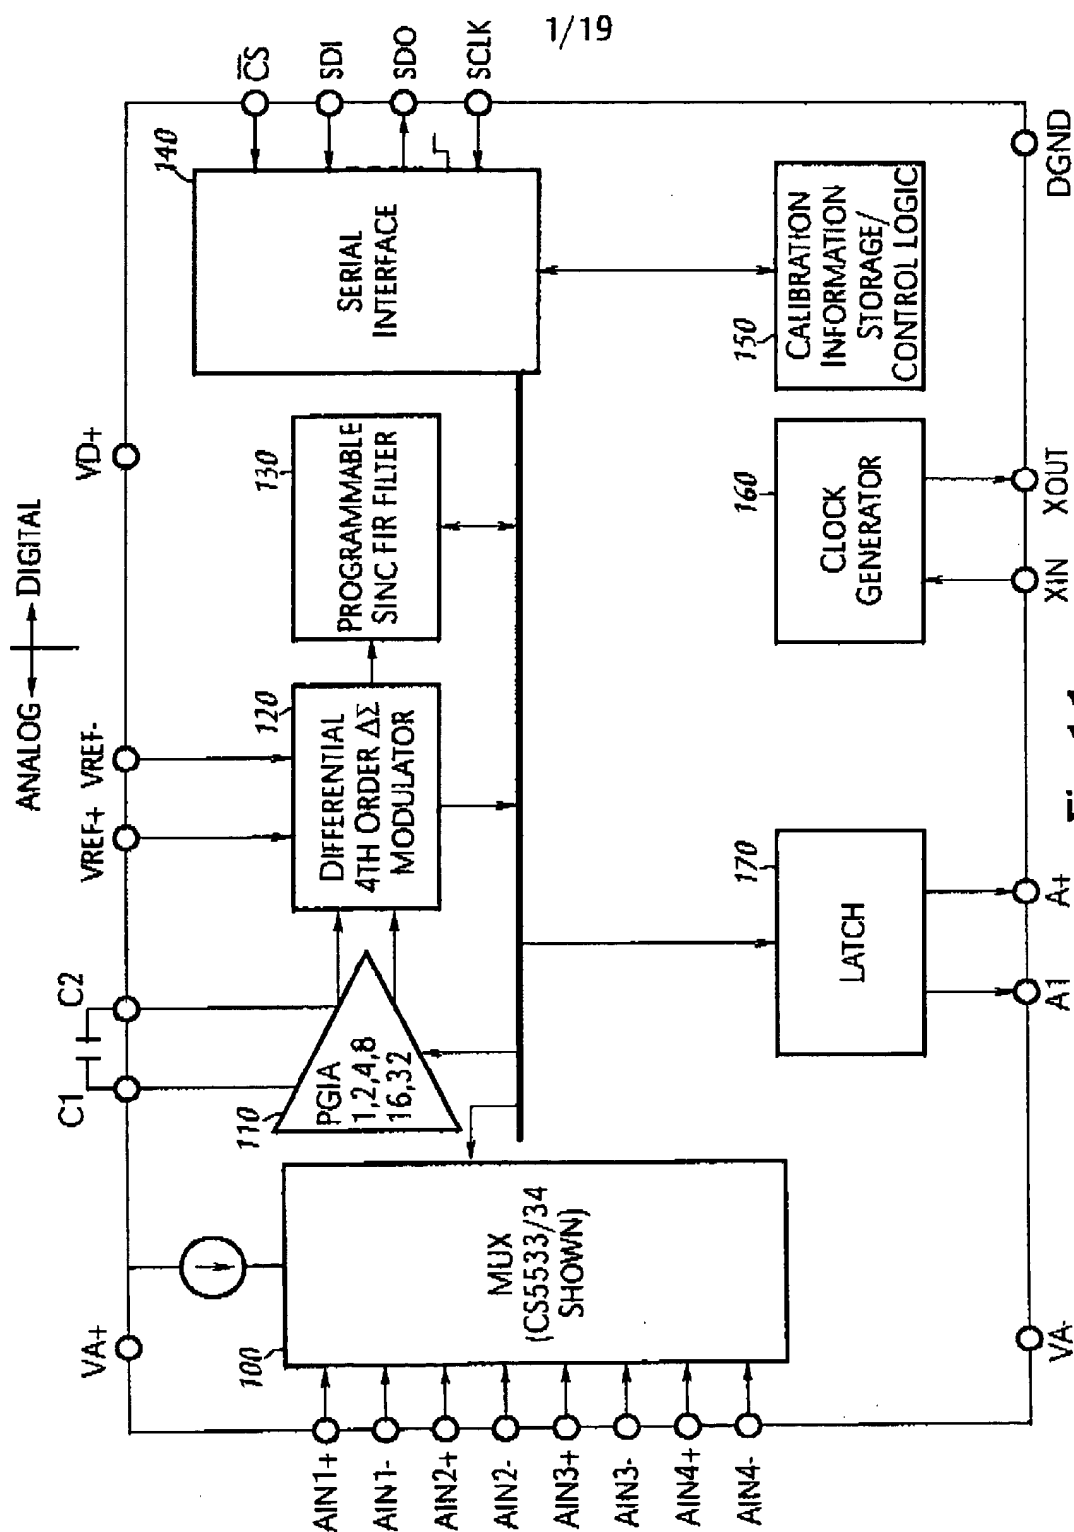
AXEL THOMSEN
1105-CA

Fig. 1.1

AXEL THOMSEN
1105-CA

2/19

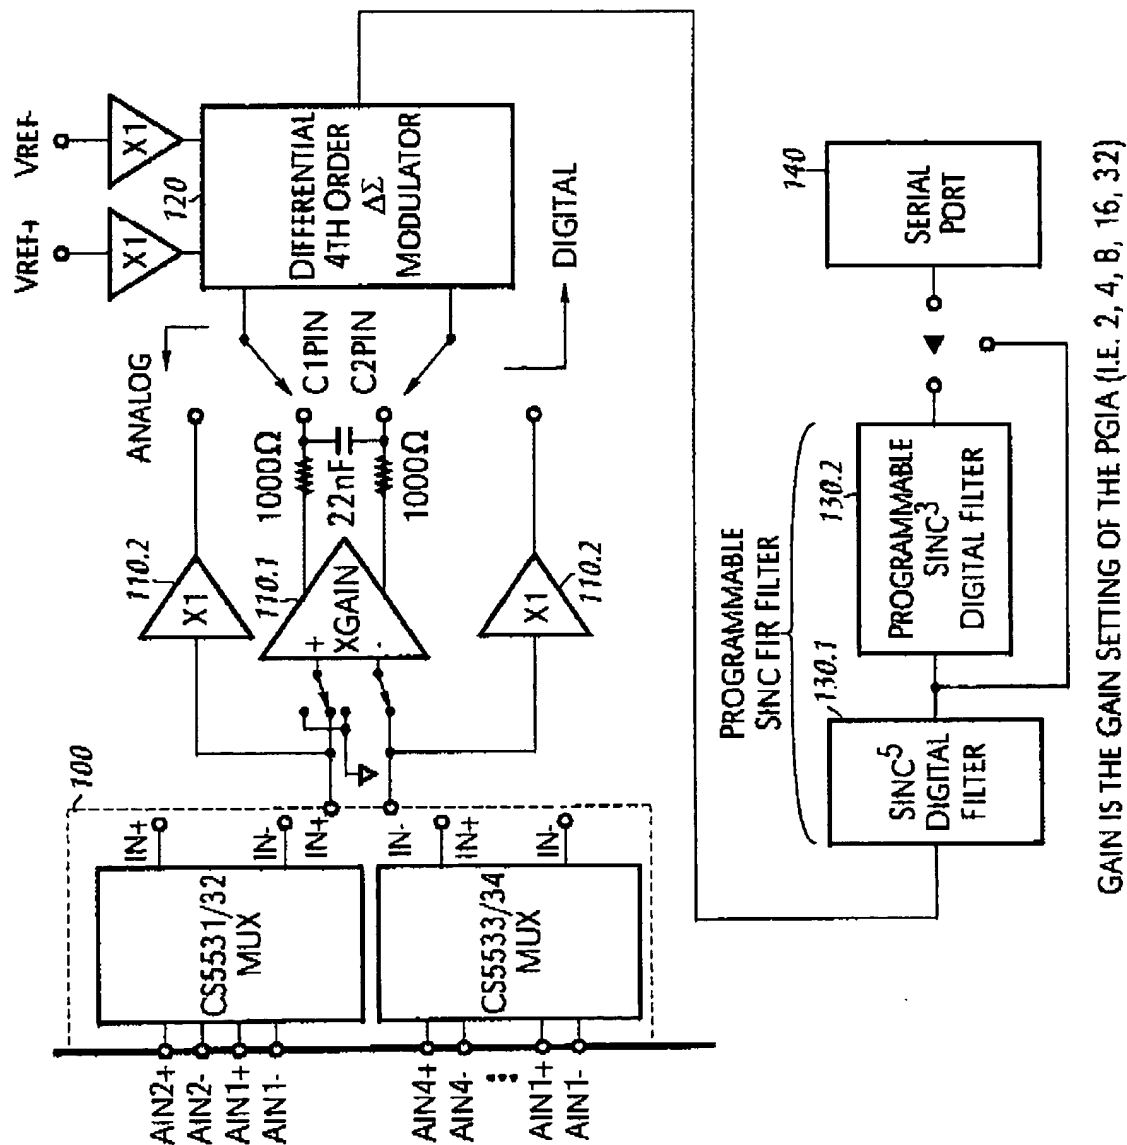


Fig. 1.2

GAIN IS THE GAIN SETTING OF THE PGA (I.E. 2, 4, 8, 16, 32)

AXEL THOMSEN
1105-CA

3/19

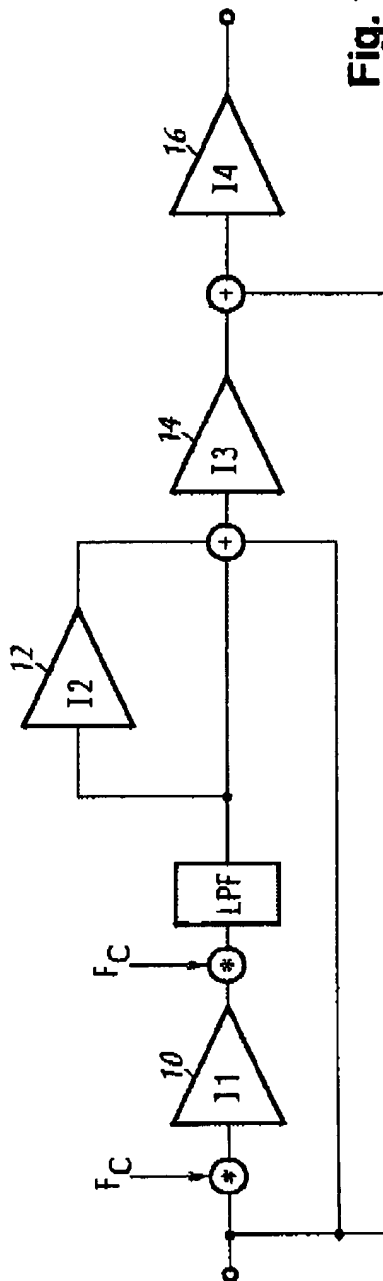


Fig. 1.3

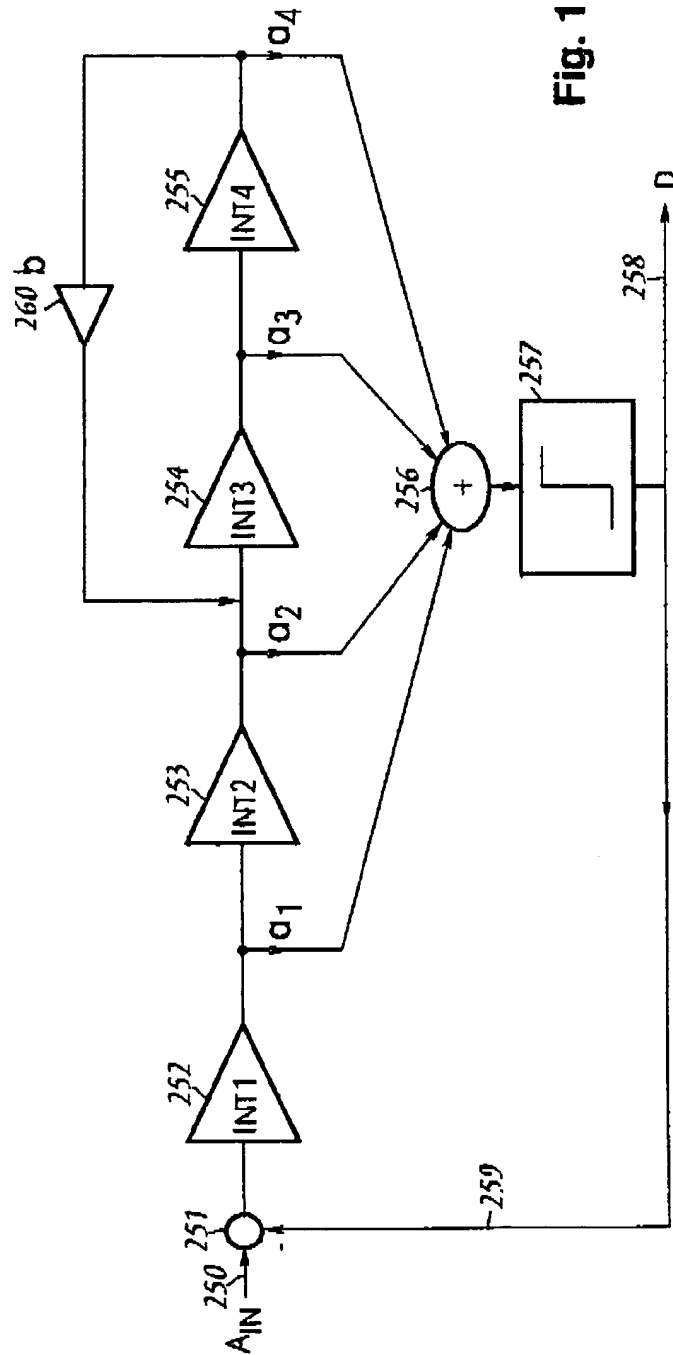


Fig. 1.4

AXEL THOMSEN
1105-CA

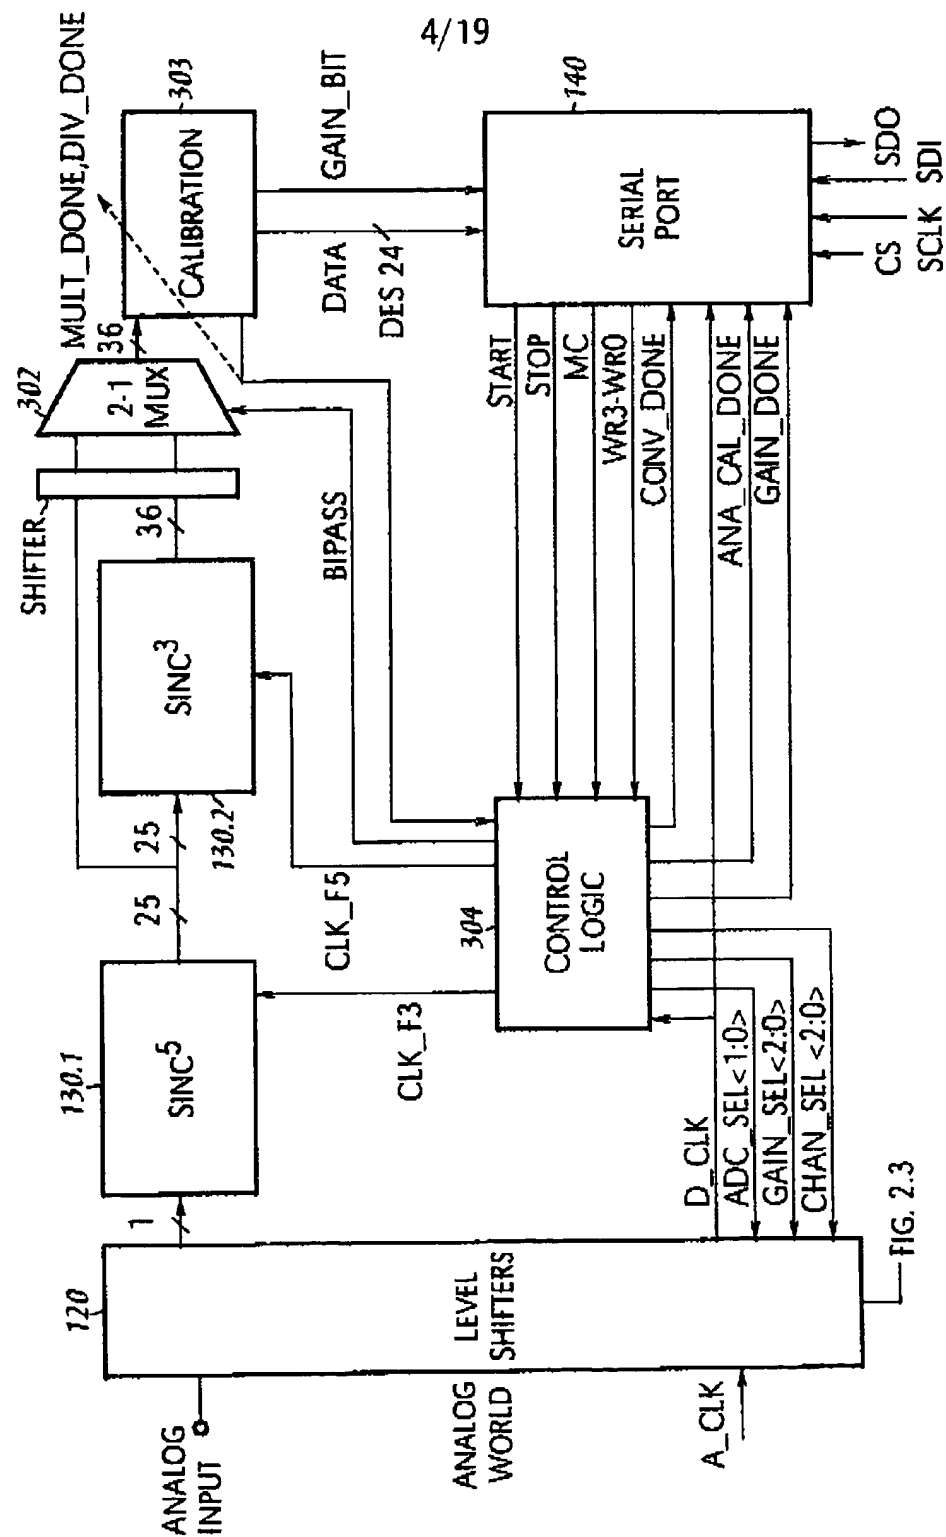


Fig. 1.5

FIG. 2.3

AXEL THOMSEN
1105-CA

5/19

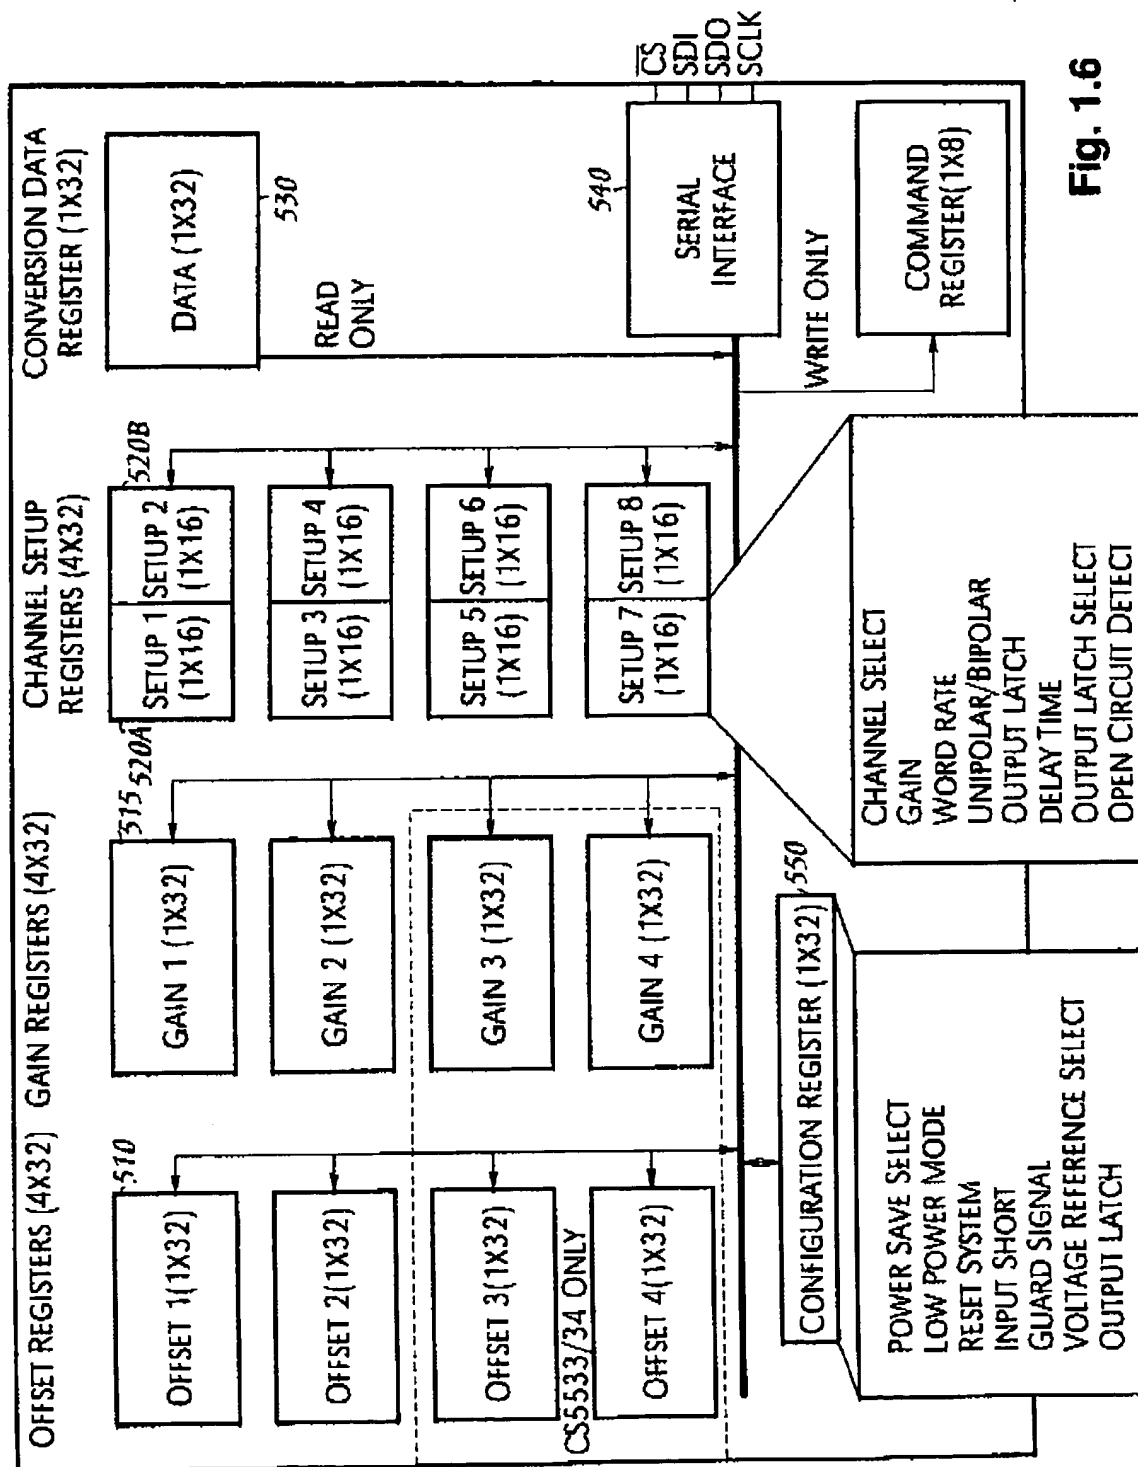


Fig. 1.6

AXEL THOMSEN
1105-CA

6/19

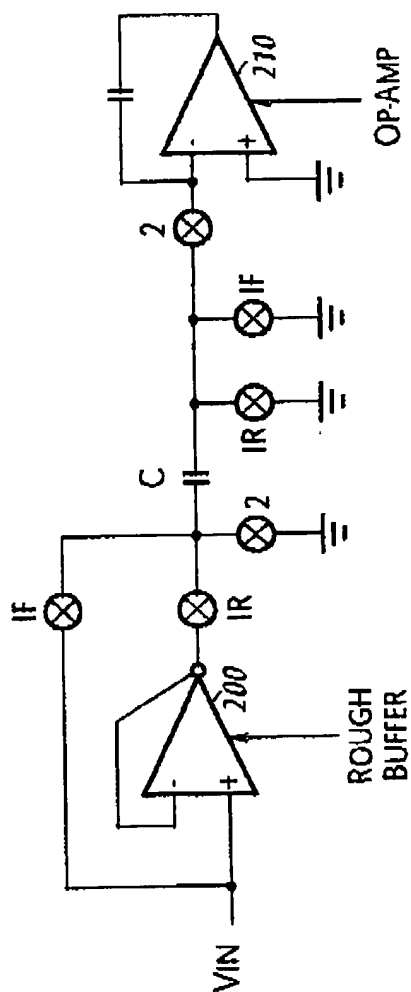


Fig. 2.0

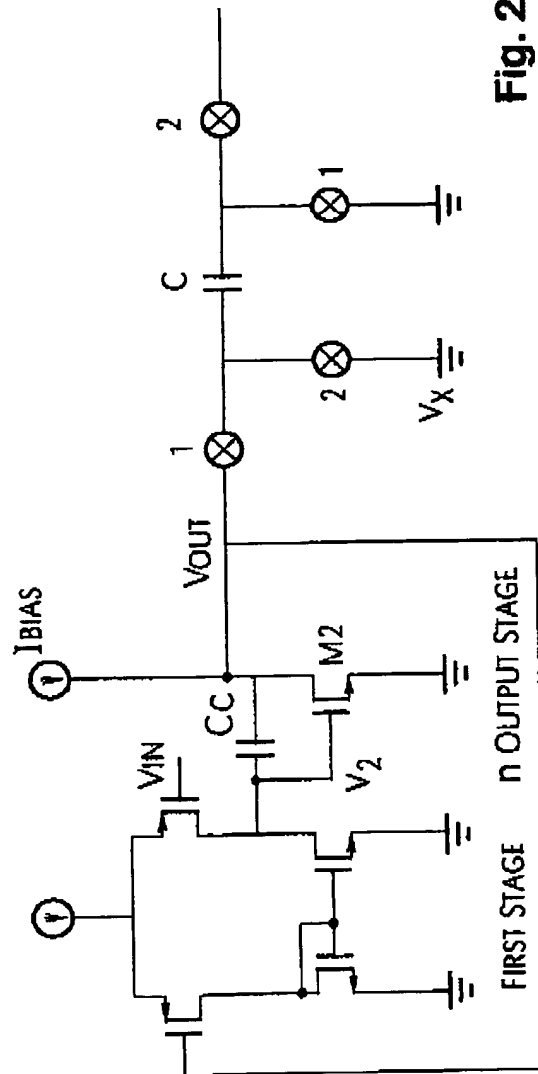


Fig. 2.1

AXEL THOMSEN
1105-CA

7/19

$V_{IN} = \text{CONSTANT}$
 $V_{OUT} > V_X$
VOLTAGE V_{OUT}

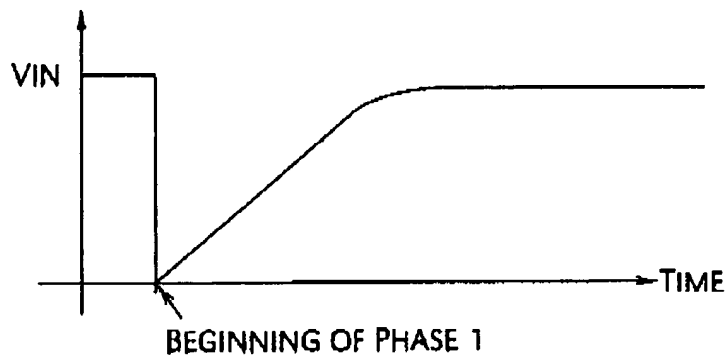


Fig. 2.2

$V_{IN} = \text{CONSTANT}$
 $V_{OUT} < V_X$
VOLTAGE V_{OUT}

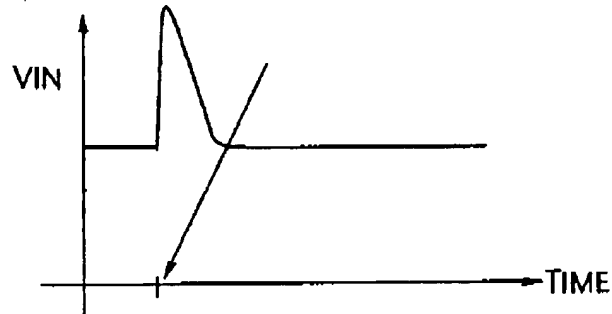


Fig. 2.3

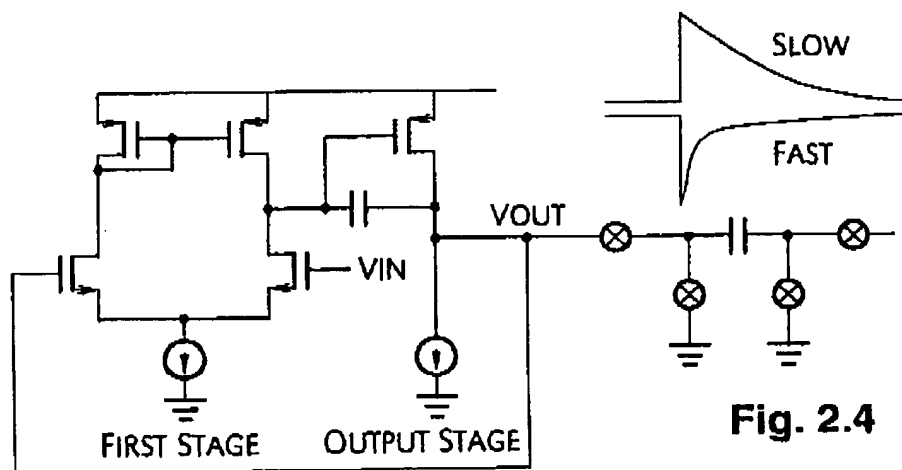


Fig. 2.4

AXEL THOMSEN
1105-CA

9/19

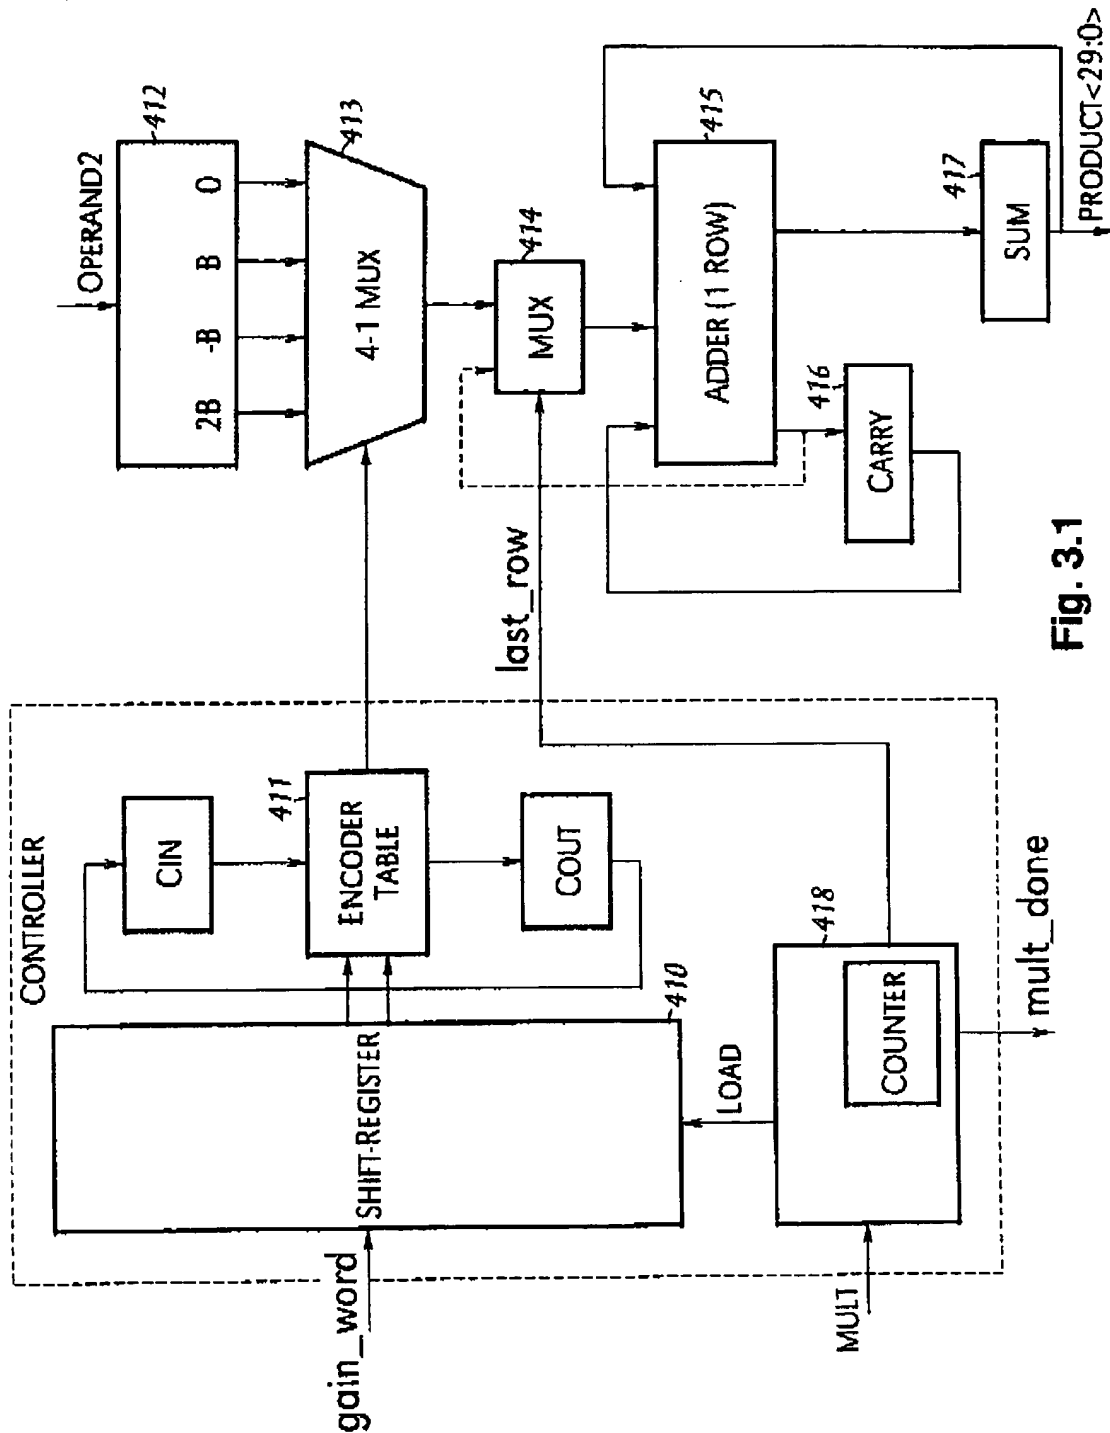


Fig. 3.1

AXEL THOMSEN
1105-CA

10/19

TABLE 2: ENCODING SCHEME PROPOSED

A_{i+1}	A_i	Operation
0	0	$R_i = R_{i-1}/4$
0	1	$R_i = (R_{i-1} + B)/4$
1	0	$R_i = (R_{i-1} + 2B)/4$
1	1	$R_i = (R_{i-1} + 3B)/4$

Fig. 3.2
(PRIOR ART)

TABLE 3: CARRY PROPAGATE ENCODING SCHEME

C_{in}	A_{i+1}	A_i	Operation	C_{out}
0	0	0	$R_i = R_{i-1}/4$	0
0	0	1	$R_i = (R_{i-1} + B)/4$	0
0	1	0	$R_i = (R_{i-1} + 2B)/4$	0
0	1	1	$R_i = (R_{i-1} - B)/4$	1
1	0	0	$R_i = (R_{i-1} + B)/4$	0
1	0	1	$R_i = (R_{i-1} + 2B)/4$	0
1	1	0	$R_i = (R_{i-1} - B)/4$	0
1	1	1	$R_i = (R_{i-1})/4$	1

Fig. 3.3
(PRIOR ART)

Fig. 3.4


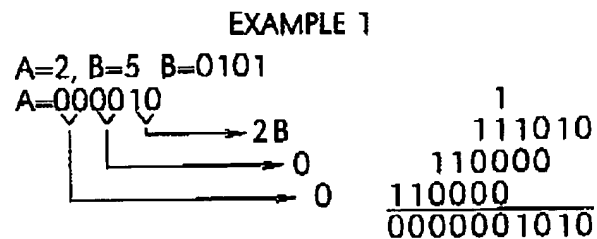


Fig. 3.5

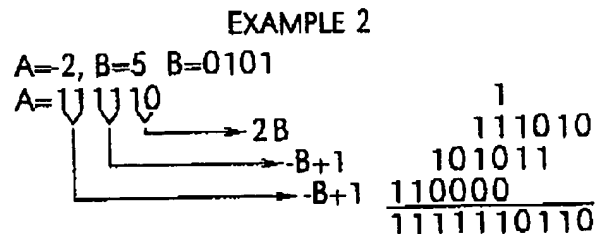

AXEL THOMSEN
1105-CA

11/19

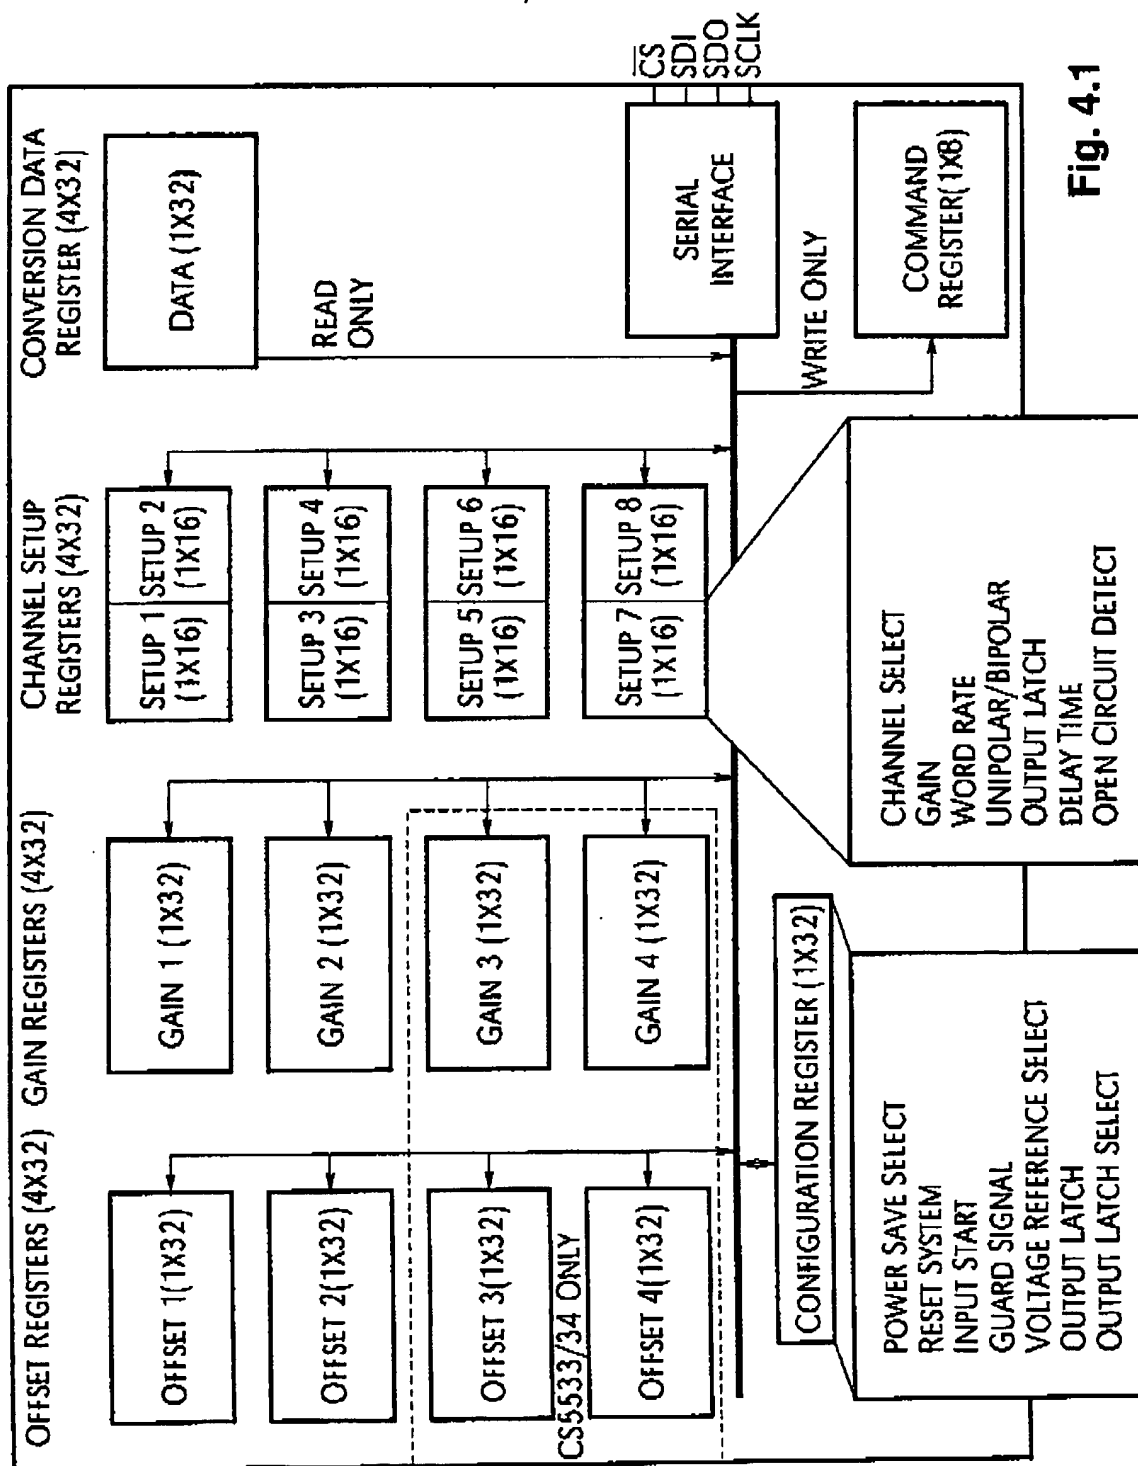


Fig. 4.1

AXEL THOMSEN
1105-CA

12/19

D7(MSB)	D6	D5	D4	D3	D2	D1	D0
0	ARA	CS1	CS0	R/W	RSB2	RSB1	RSB0

BIT	NAME	VALUE	FUNCTION
D7	COMMAND BIT, C	0 1	MUST BE LOGIC 0 FOR THESE COMMANDS. THESE COMMANDS ARE INVALID IF THIS BIT IS LOGIC 1.
D6	ACCESS REGISTERS AS ARRAYS, ARA	0 1	IGNORE THIS FUNCTION. ACCESS THE RESPECTIVE REGISTERS, OFFSET, GAIN, OR CHANNEL-SETUP, AS AN ARRAY OF REGISTERS. THE PARTICULAR REGISTERS ACCESSED ARE DETERMINED BY THE RS BITS. THE REGISTERS ARE ACCESSED MSB FIRST WITH PHYSICAL CHANNEL 0 ACCESSED FIRST FOLLOWED BY PHYSICAL CHANNEL 1 NEXT AND SO FORTH.
D5-D4	CHANNEL SELECT BITS, CS1-CS0	00 01 10 11	CS1-CS0 PROVIDE THE ADDRESS OF ONE OF THE TWO (FOUR FOR CS5533/34) PHYSICAL INPUT CHANNELS. THESE BITS ARE ALSO USED TO ACCESS THE CALIBRATION REGISTERS ASSOCIATED WITH THE RESPECTIVE PHYSICAL INPUT CHANNEL. NOTE THAT THESE BITS ARE IGNORED WHEN READING DATA REGISTER.
D3	READ/WRITE, R/W	0 1	WRITE TO SELECTED REGISTER. READ FROM SELECTED REGISTER.
D2-D0	REGISTER SELECT BIT, RSB3-RSB0	000 001 010 011 100 101 110 111	RESERVED OFFSET REGISTER GAIN REGISTER CONFIGURATION REGISTER CONVERSION DATA REGISTER (READ ONLY) CHANNEL-SETUP REGISTERS RESERVED RESERVED

Fig. 4.2

AXEL THOMSEN
1105-CA

13/19

D7(MSB)	D6	D5	D4	D3	D2	D1	D0
1	MC	CSRP2	CSRP1	CSRP0	CC2	CC1	CC0

BIT	NAME	VALUE	FUNCTION
D7	COMMAND BIT, C	0	THESE COMMANDS ARE INVALID IF THIS BIT IS LOGIC 0.
		1	MUST BE LOGIC 1 FOR THESE COMMANDS.
D6	MULTIPLE CONVERSIONS, MC	0	PERFORM FULLY SETTLED SINGLE CONVERSIONS.
		1	PERFORM CONVERSIONS CONTINUOUSLY.
D5-D3	CHANNEL-SETUP REGISTER POINTER BITS, CSRP	000	THESE BITS ARE USED AS POINTERS TO THE CHANNEL-SETUP REGISTERS. EITHER A SINGLE CONVERSION OR CONTINUOUS CONVERSIONS ARE PERFORMED ON THE CHANNEL SETUP REGISTER POINTED TO BY THESE BITS.
		...	
		111	
D2-D0	CONVERSION/CALIBRATION BITS, CC2-CC0	000	NORMAL CONVERSION
		001	SELF-OFFSET CALIBRATION
		010	SELF-GAIN CALIBRATION
		011	RESERVED
		100	RESERVED
		101	SYSTEM-OFFSET CALIBRATION
		110	SYSTEM-GAIN CALIBRATION
		111	RESERVED

Fig. 4.3

AXEL THOMSEN
1105-CA

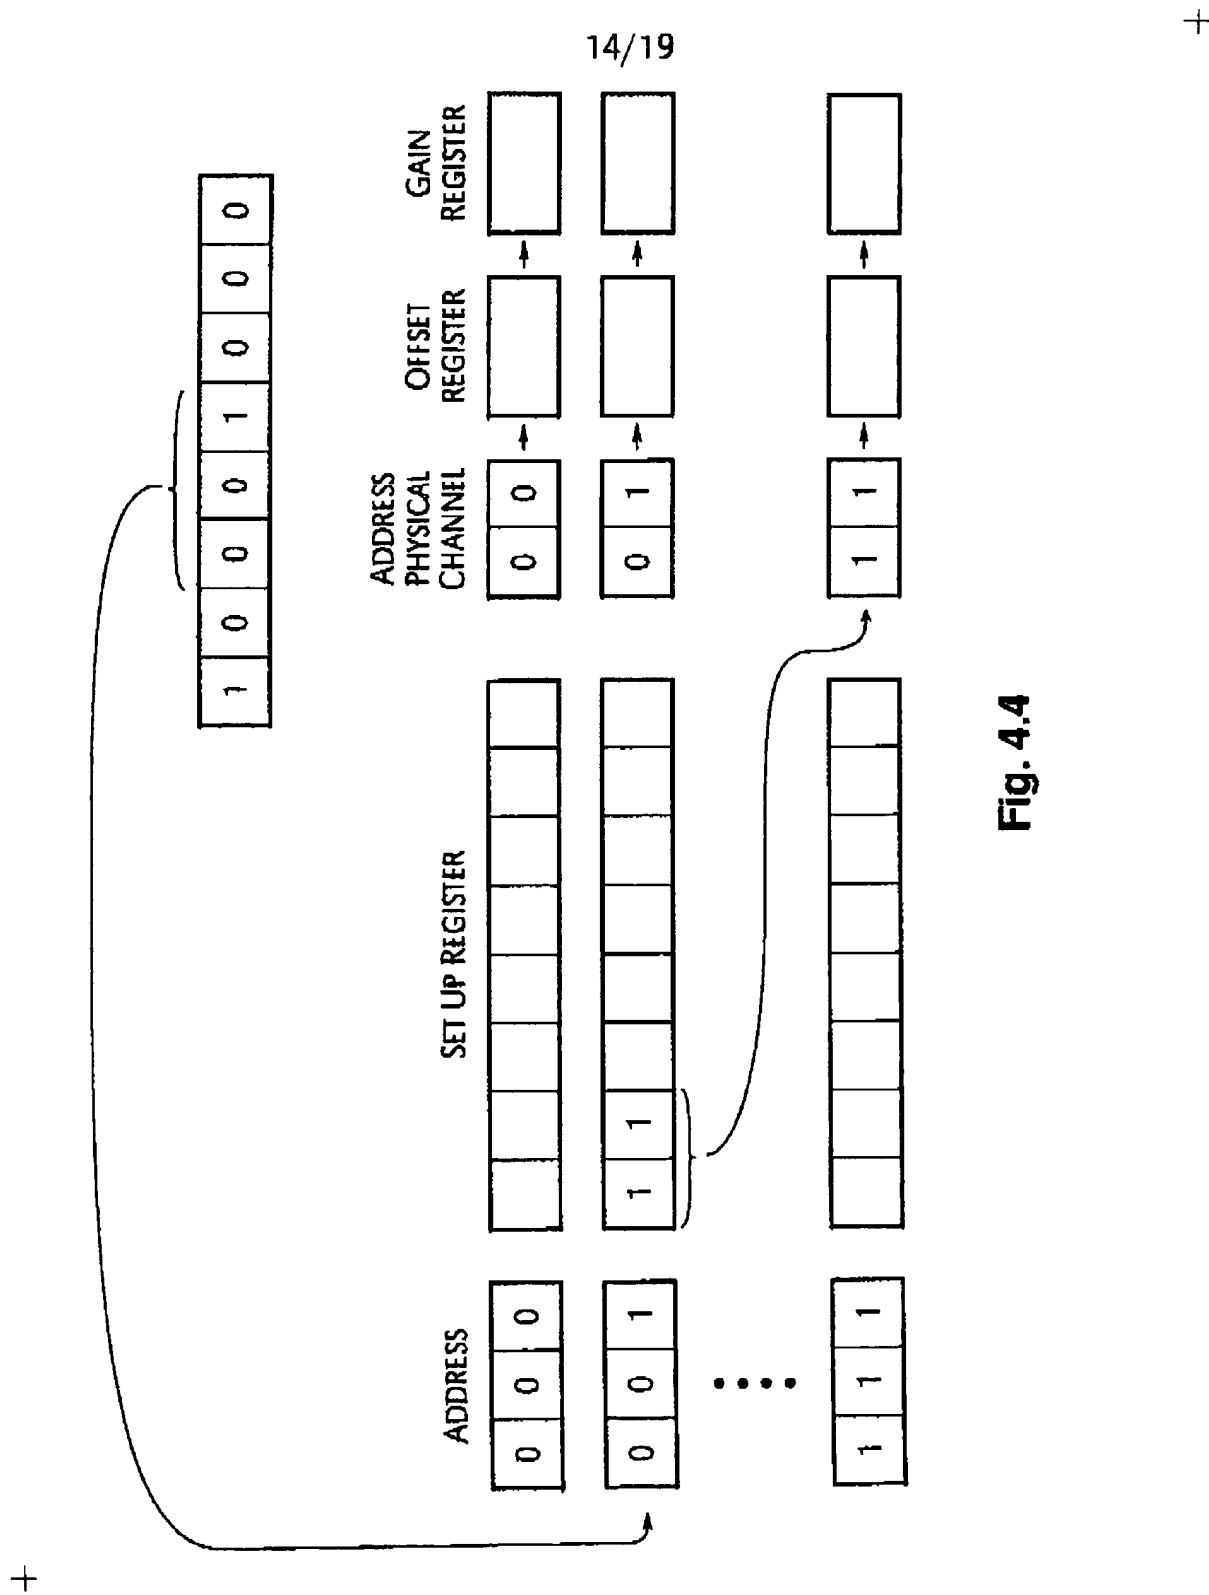


Fig. 4.4

AXEL THOMSEN
1105-CA

15/19

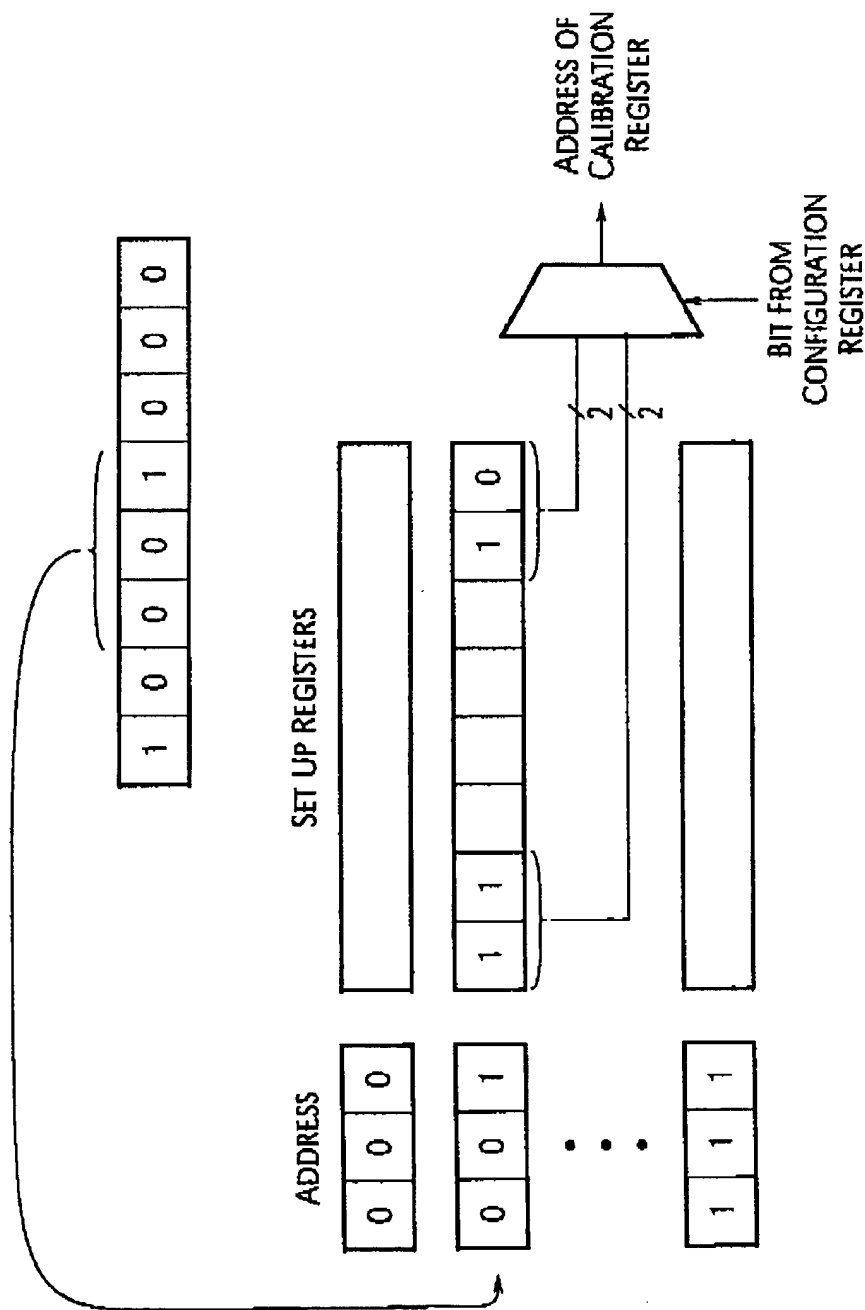


Fig. 4.5

AXEL THOMSEN
1105-CA

16/19

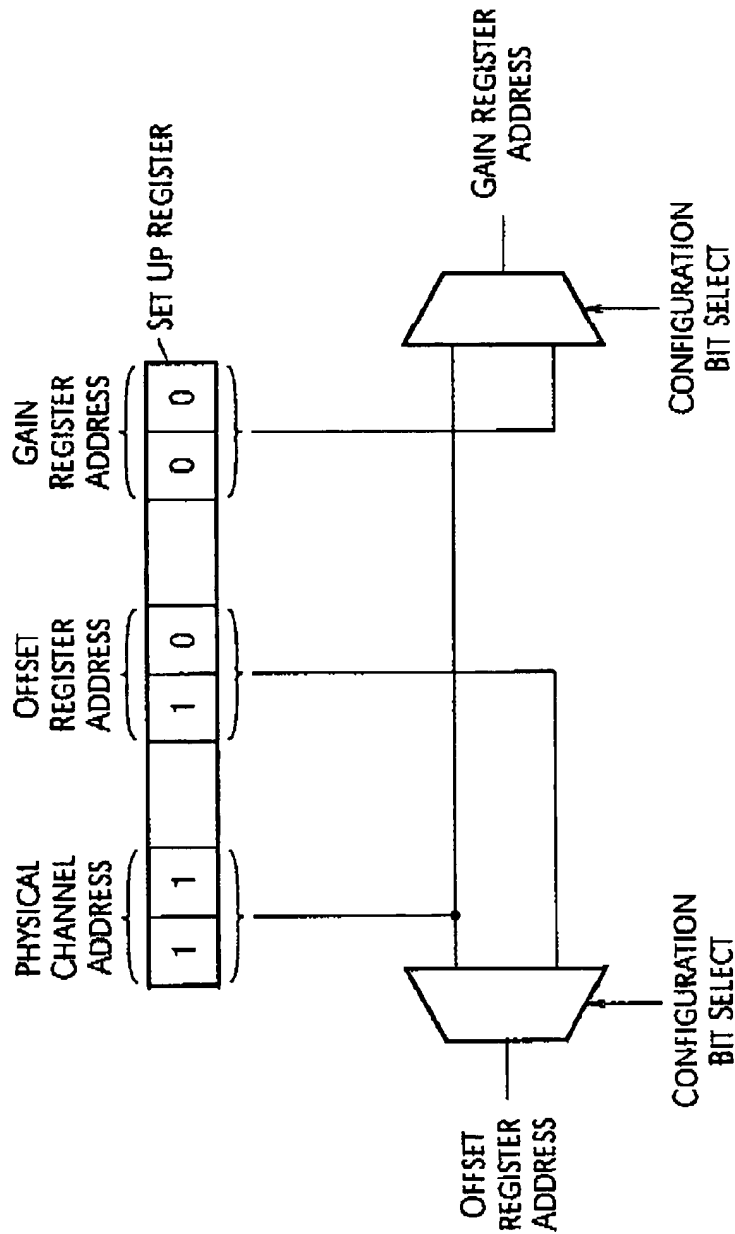
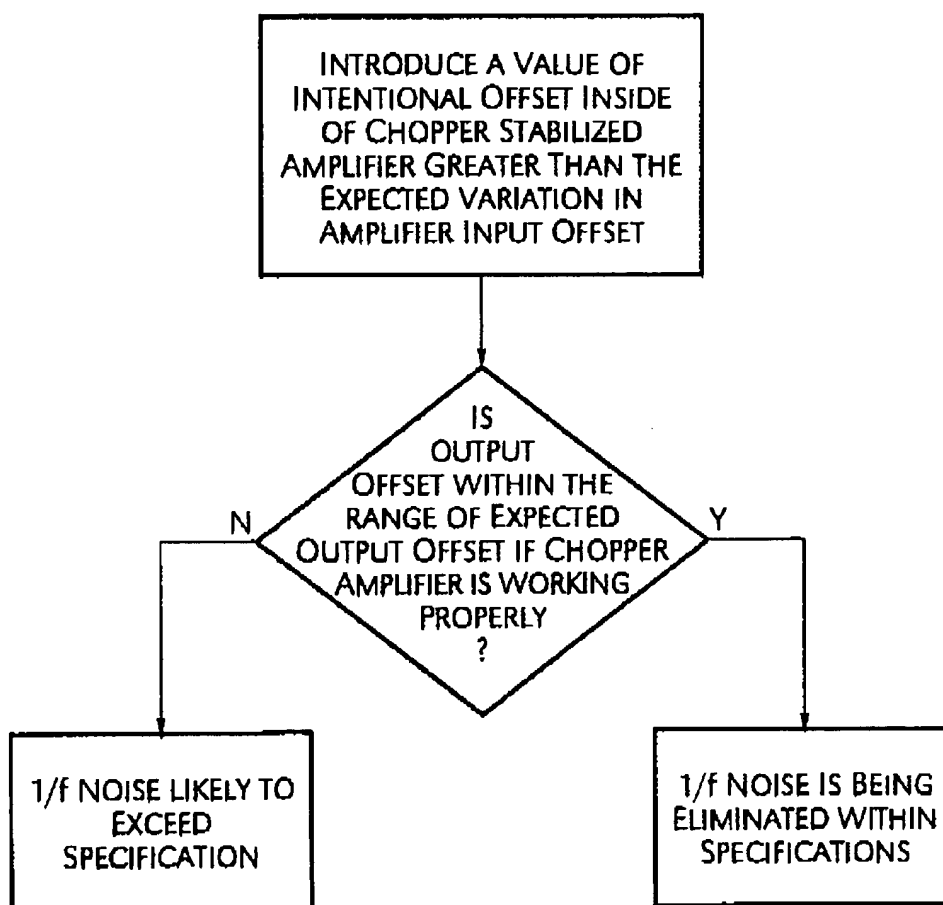


Fig. 4.6

AXEL THOMSEN
1105-CA

17/19

**Fig. 5.1**

AXEL THOMSEN
1105-CA

18/19

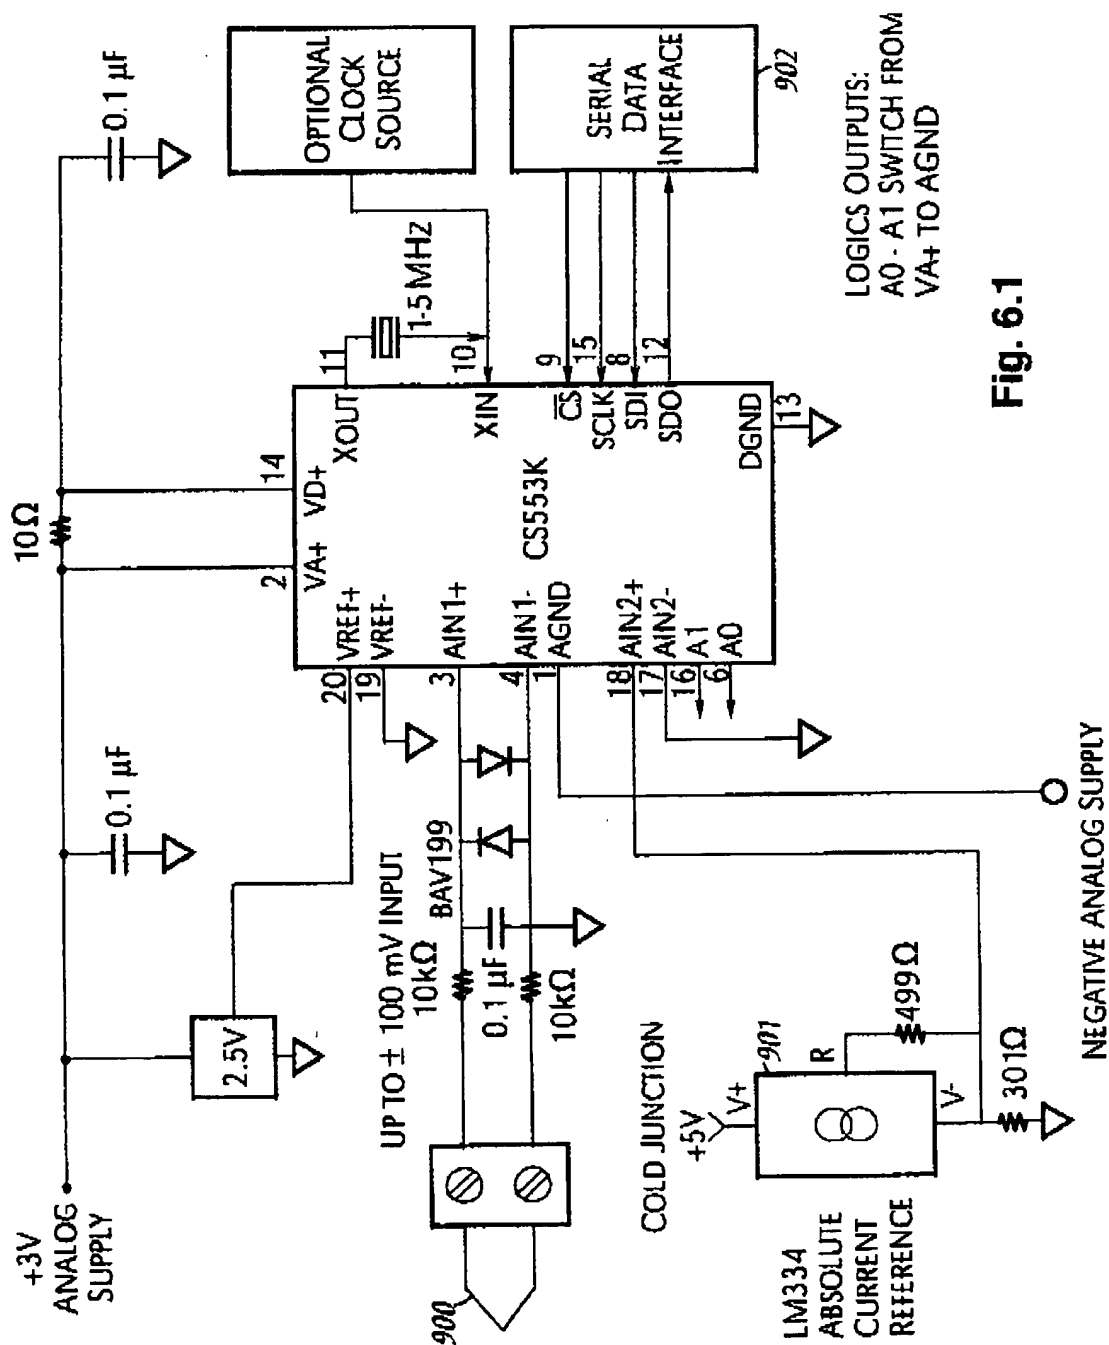


Fig. 6.1

AXEL THOMSEN
1105-CA

19/19

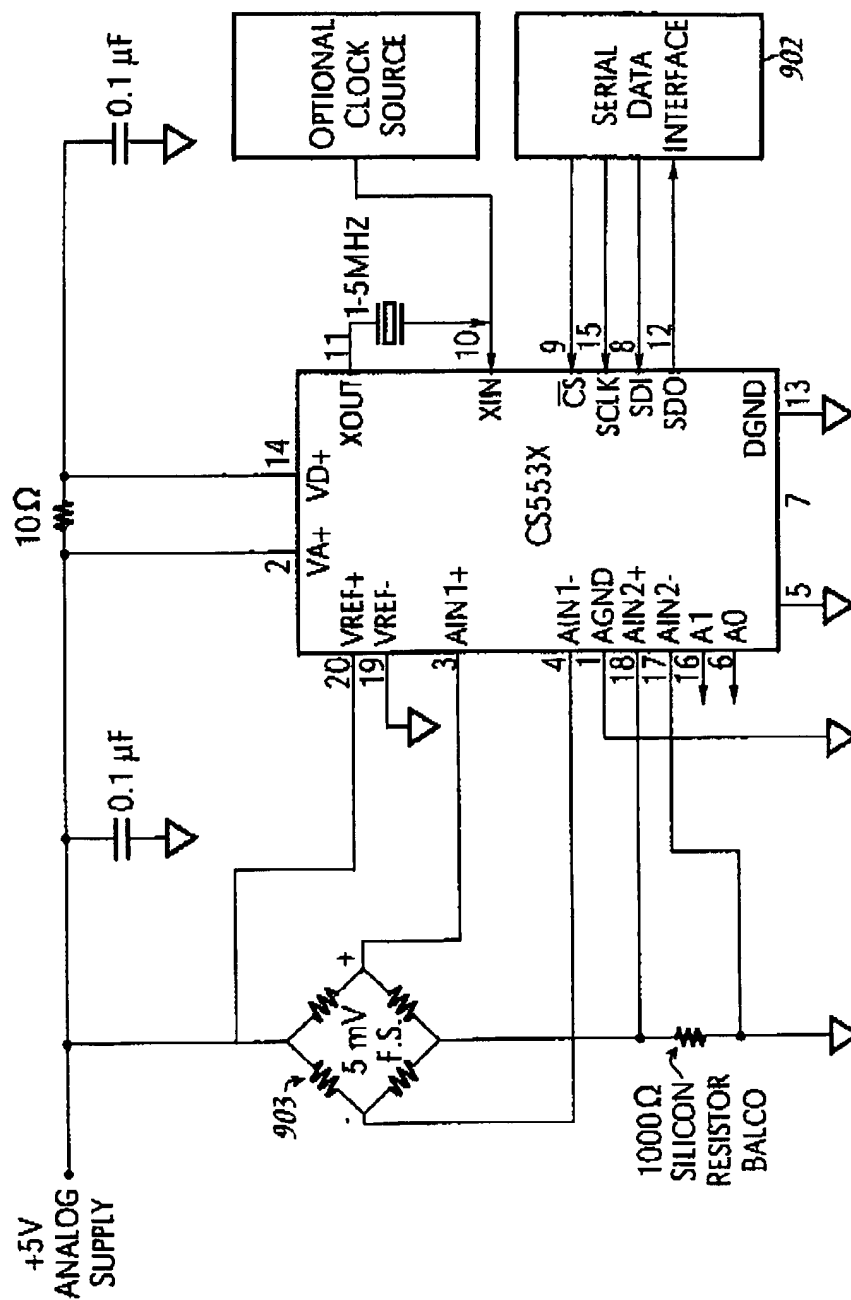


Fig. 6.2